


INSTRUCTION MANUAL

1. Assemble all parts in numerical order.

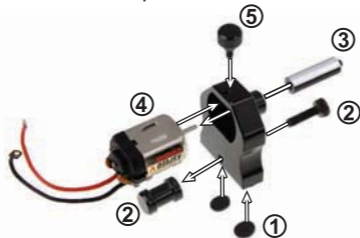

2. Assembled view



3. Refer to Motor master's manual to check your motor RPM.



Muchmore

127-1, Poongdong, Ilsangu, Goyang-city, Geonggi-do, 411-842 Korea

Phone: +82 31 903 0487 Fax: +82 31 903 0497